

# Custom Truck One Source Knuckle Crane Engine Control



## Wiring to Crane


### Deutsch DT 12 Pin

Pin	Color	Desc
1	WH/RD	Master Power
2	WH/GY	
3	OR	
4	BN	Start Signal
5	RD/WH	
6	BK/WH	
7	WH/OR	
8	WT/PK	
9	PK	Bump Throttle
10	WH/BN	Stop Signal
11	WH/BK	
12		


## Menu Options



Press Start, Stop, Auto and Alarm Off buttons at the same time to bring up the menu.

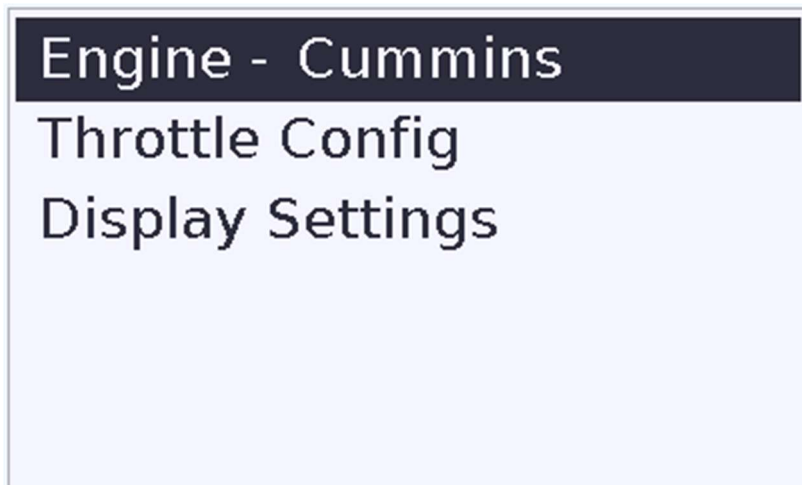

Highlight menu line and press enter

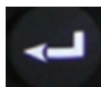 

**Engine Select**

Highlight the engine mfg to select

- Cummins
- Detroit
- Paccar MX
- Paccar MX DECU



To Exit

## Throttle Config

Highlight Min to set idle speed

Highlight Bump RPM to set high idle speed

Calibrate Throttle		Cummins
Pedal	<input type="text" value="0.0 v"/>	
Min	<input type="text" value="0.0 v"/>	Req RPM <input type="text" value="0"/>
Max	<input type="text" value="0.0 v"/>	
RPM	<input type="text" value="0"/>	Bump RPM <input type="text" value="0"/>
Min	<input type="text" value="0"/>	
Max	<input type="text" value="0"/>	

 


To increase



To Decrease

Calibrate Throttle		Cummins
Pedal	<input type="text" value="0.0 v"/>	
Min	<input type="text" value="0.0 v"/>	Req RPM <input type="text" value="0"/>
Max	<input type="text" value="0.0 v"/>	
RPM	<input type="text" value="0"/>	Bump RPM <input type="text" value="0"/>
Min	<input type="text" value="0"/>	
Max	<input type="text" value="0"/>	



To increase




To Decrease





To Exit

## Display Settings

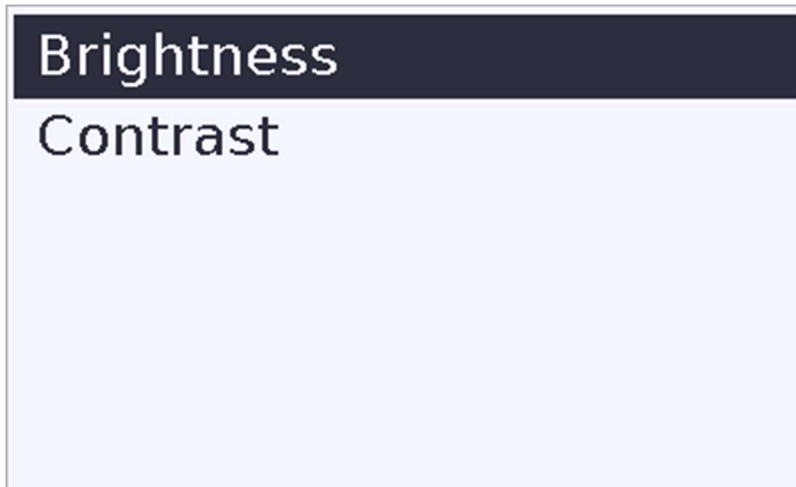

Highlight menu line and press enter

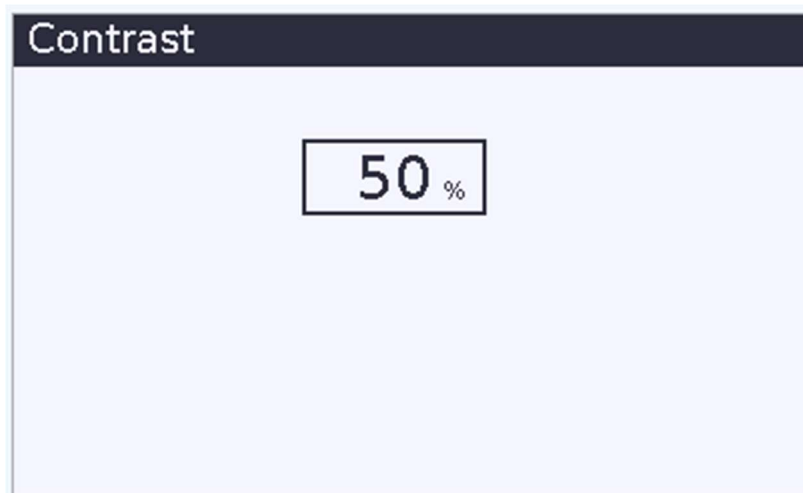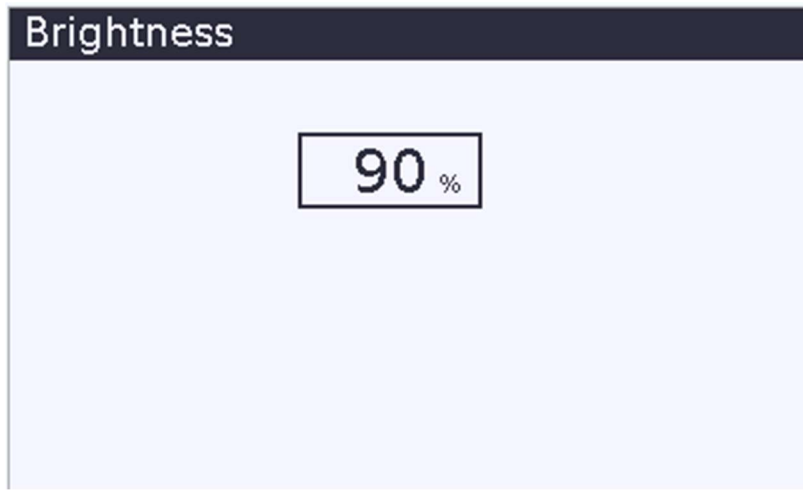

To increase



To Decrease

## Operation

Knuckle - Cummins			
Batt	0.0 v	Relays	Crane Hours
		Acc	0.0
		Ign	
Outputs	Device Inputs	Requested	
Start	Start	RPM	
	0.00	0	
	Stop	Engine	
	0.00	RPM	
CAN ERR	Throttle	22345AA 06-28-21	0
Engine	0.00		

Batt – input voltage

### Relays

Acc Off - Cab key position for Acc active

On - Acc off

Ign Off – Cab key position for Ign active

On – Ign off

Crane Hours - Increment if engine RPM > 500 RPM

### Outputs

Start On – Sending voltage to start pin in the cab

Knuckle - Cummins			
Batt	0.0 v	Relays	Crane Hours
		Acc	0.0
		Ign	
Outputs	Device Inputs	Requested	
Start	Start	RPM	
	0.00	0	
	Stop	Engine	
	0.00	RPM	
CAN ERR	Throttle	22345AA 06-28-21	0
Engine	0.00		

## Device Inputs

Start – Approx 4.68v with start off. Goes to approx 4.95v with start signal on.

Stop– Approx 4.68v with stop off. Goes to approx 4.95v with stop signal on.

Stop– Approx 4.68v with throttle off. Goes to approx 4.95v with throttle signal on.

## Requested RPM

Requested engine RPM being sent to the engine via TSC1 CAN message.

## Engine RPM

Actual Engine RPM being read from engine CAN message.’



And Green LED is solid on.



This is shown when no RPM message is being seen from the engine.



And Red LED is flashing on.

22345AA 06-28-21

Software number and revision date

## Loading software updates

File name is configurationFull.gciBin

Put the file on a USB stick formatted. Install stick in the 6-Pin to USB download cable.

Enovation part# 7800668.



Press Exit and Down buttons while unit is powered on.



Release button when all 3 LEDs are lit.

LEDs flash while program is being loaded.

Green LED goes solid when program load is complete.

Remove USB stick and unit reboots to the new software.

Note – if all LEDs flashing continues for more than 30 second there is either an issue with the USB stick or it does not have a correct file on it.